

# Operator Codes

Environment	Code
Standard	No letters
Nema 4/12	W
Nema 4X	C
Nema 7/9	X

Jackshaft Hoist Mount	Code
Right mount	0
Left mount	1
Trolley Chain	Code
#48 (#410)	0
#41	1

Control	Code
Electromechanical	0
ECB (5V logic)	E

Other Modifications

**M T B H X**

**6 1 1 1 - 1 0 0 0**

Operator Model	Code	Operator Model	Code
MLT	<b>MLT</b>	Opera-H	<b>OPH</b>
MTH	<b>MTH</b>	Opera-HJ	<b>OHJ</b>
MTBH	<b>MTBH</b>	Opera-SH	<b>OSH</b>
MGT	<b>MGT</b>	Opera-GH	<b>OGH</b>
Opera-MJ	<b>OMJ</b>	MGH	<b>MGH</b>
Opera-MH	<b>OMH</b>	MSL	<b>MSL</b>
Opera-J	<b>OPJ</b>	MGSL	<b>MGSL</b>

Frequency (Hz)	Code
60	<b>6</b>
50	<b>5</b>

Voltage (Ph)	Code (60 Hz)
115	<b>1</b>
230(1) / 208(3)	<b>2</b>
460	<b>4</b>
575	<b>5</b>

Phase	Code
1	<b>1</b>
3	<b>3</b>

Power (HP)	Code
1/3*	<b>1</b>
1/2	<b>2</b>
3/4	<b>3</b>
1	<b>4</b>
1 1/2	<b>5</b>
2	<b>6</b>
3	<b>7</b>
5	<b>8</b>

\* Available in the US only

1. Product Code
2. Environment Modification Code (if applicable)
3. Frequency Code
4. Voltage Code
5. Phase Code

6. Power Code
7. Jackshaft Hoist Mount or Trolley Chain Code
8. Control Option Code
9. Other Modifications Code

Operator Code\_E 2009/09/09