

Installation & Programming Instructions

ECB

&

WARNING LIGHTS

(Red & Green)

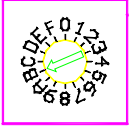
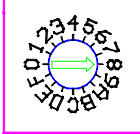


Warning Light Sequence

Lights	Operating sequence
Red	The light is solid red when the door is closing and opening. Light turns OFF once the door reaches the fully open or fully closed position
Green	The green light is ON only when the door is fully open and stays ON during a preset time (programmed by the Timer to Close)
Red (flashing)	The red light starts flashing once the green light is OFF and when the door is about to close. This is to warn the users that the door will close shortly. It stops flashing once the door start closing.
Warning lights sequence is operational from Mid-Point position in same way as from fully open	

Programming warning lights sequence (door should be in the closed position)

NOTE: Warning lights is functional only with Timer to Close

SETTING	ACTIVATE	DEACTIVATE	SELECT SWITCH
TIMER TO CLOSE	<ul style="list-style-type: none"> Set select switch on "B" Press "Open" button to add 15 sec or "Close" button to add 1 sec each time (max. 4 minutes & 30 seconds) Set the select switch on T (4) or TS (5) mode 	<ul style="list-style-type: none"> Set select switch on "B" Press "Stop" button the timer to close is reset to 0 sec but still is activated. To deactivate the timer to close completely set the switch on desired position (0, 1, 2 or 3) 	
Default time setting 5 sec			
RED LIGHTS (Flashing Time)	<ul style="list-style-type: none"> Set select switch on "8" Press "Open" to add 1 sec each time to a maximum of 15 sec. Press "Close" to deduct 1 sec each time to a minimum of 0 sec. Press "Stop" to bring the flashing time to 5 sec by default 	<ul style="list-style-type: none"> Set select switch on "8" and press "Close" to bring the flashing time to 0 sec. Or set the select switch to desired position (0, 1, 2 or 3) 	
	Bring back select switch on T (4) or TS (5)		

Connection of Red and Green warning lights (If Warning Lights Module is sold separately)

