

# Building an Operator Product Code

1

Operator Models	Code	Operator Models	Code
Opera-MJ	OMJ	OTBH Apartment	OTBH-A.00
Opera-MH	OMH	OTBH Premium Apartment	OTBH-A.05
Opera-J	OPJ	Silencio®	OTH-A.06
Opera-H	OPH	Silencio® + Brake	OTBH-A.06
Opera-HJ	OHJ	Silencio® + Brake + Speed Managing Device	RTBH-A.06
Opera-SH	OSH	MGT	MGT
MSJ	MSJ	OSL	OSL
Opera-GH	OGH	MGSL	MGSL
MGH	MGH	Rapido® RSH	RSH
MRGH	MRGH	Rapido® RVH	RVH
OMT	OMT	Rapido® RMSJ	RMSJ
OMT + Brake	OMBT	Rapido® RGH	RGH
OTH	OTH	Rapido® RTBH 19"/s	RTBH-1.19
OTBH	OTBH	Rapido® RTBH 23"/s	RTBH-1.23
OTH Apartment	OTH-A.00	Allegro	ALLE

2

Environmental Applications (if applicable)	Code
Standard	No letters
Damp Environment	W
Corrosive Environment	C
Hazardous Location Environment	X

3

Frequency (Hz)	Nominal Voltage (V)	Phase	Code
60	120	1	6 1 1
60	208	1	6 8 1
60	240	1	6 2 1
60	208	3	6 2 3
60	240	3	6 7 3
60	480	3	6 4 3
60	600	3	6 5 3
50	220	1	5 2 1
50	380	3	5 3 3

O T B H W

6 1 1 3

1 M 0 0

4

Horsepower (HP)	Code
1/2	2
3/4	3
1	4
1-1/2	5
2	6
3	7
5	8

5

Jackshaft Hoist Mount	Code
Hoist mounted on Right	0
Hoist mounted on Left	1
Trolley Chain	Code
#48 (#410)	0
#41	1
Sliding Door Chain	Code
#41	1
Trolley Apartment Chain	Code
Apartment Version #41	A

6

Control Options	Code
ECB Monitored with Photoelectric Cells	M
ECB Monitored without Photoelectric Cells	N
External Control Panel	P

7

Other Modifications (if applicable)

1. Operator Model Selection
2. Environmental Application Selection (if applicable)
3. Operator Frequency, Voltage & Phase Selection
4. Horsepower Selection

5. Mechanical Modification Selection (according to your application)
6. Control Options Selection
7. Other Modifications (if applicable)

Call: 800-361-2260 • manaras.com

Specifications and design modifications subject to change without prior notice. Operator Codes\_E\_2023.05.03\_R0

