


Trolley Drive Chain Guard Kit

MODKIT141 / MOD141 - Instructions

Instructions

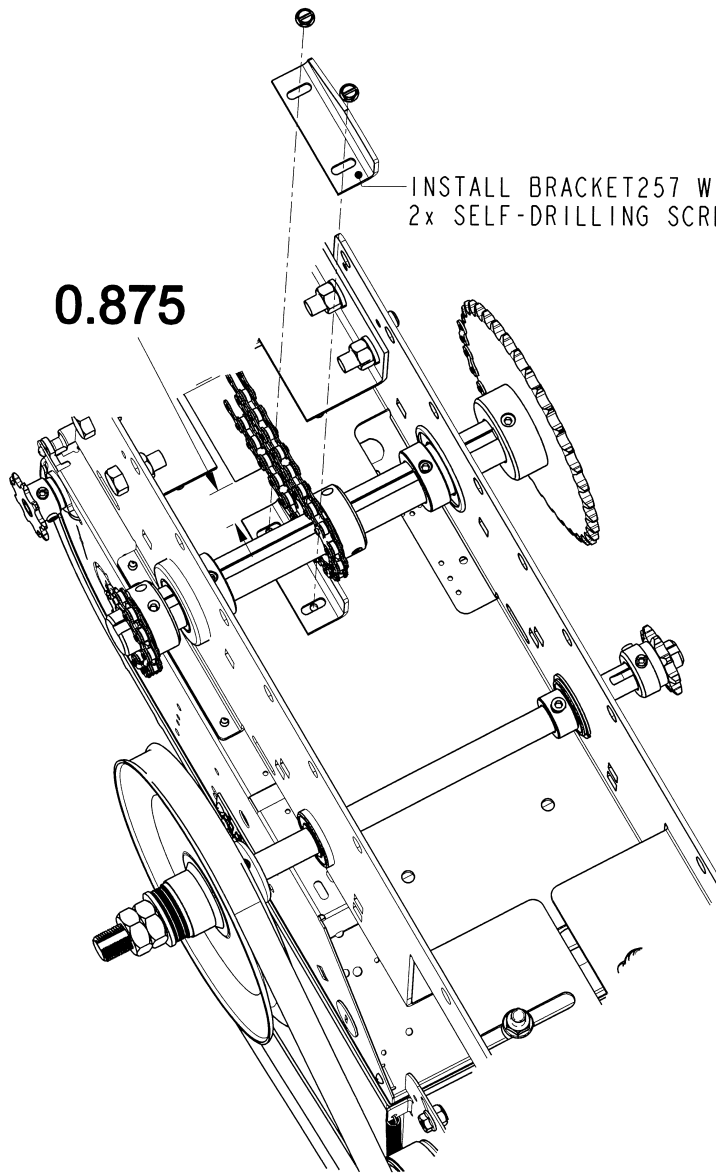

INSTALL BRACKET 257 WITH
2x SELF-DRILLING SCREW No 10

0.875

CENTER THE BRACKET WITH TROLLEY CHAIN

